


Replacing the relative humidity sensor in a WatchDog™ datalogger.

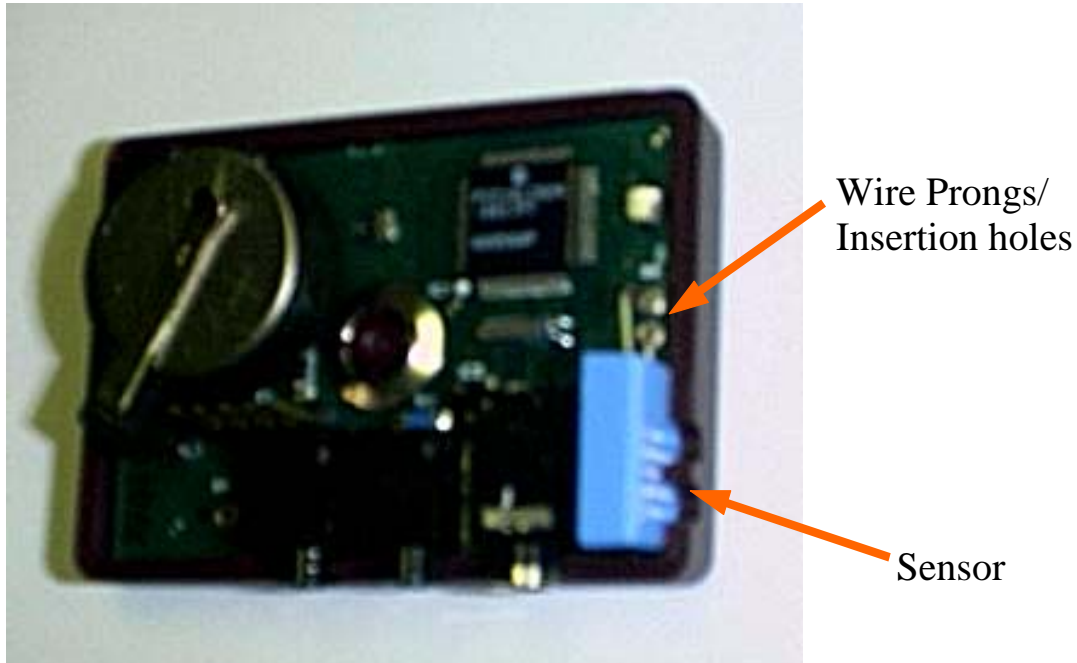

1. Remove back cover from WatchDog and locate RH sensor.
2. Carefully remove sensor and wire prongs. It is a good idea to use a tweezers or needle-nosed pliers.
3. Insert new sensor and gently push prongs into their respective insertion holes.