

## **TECHNICAL BULLETIN NO. 20170622**

June 22, 2017

SUBJECTActivation Code for TDR Turf Rod SpacerPRODUCT FAMILYTDR 100 and 300 Soil Moisture MetersAFFECTED UNITS6430FS, 6440FS

## DETAILS

The TDR100 and TDR300 meters can take soil moisture readings at 0.5" (1.3cm) and 1.0" (2.5cm) through the use of a TDR Turf Rod Spacer (item 6435SP). The TDR meter must be running firmware version 7.0 or higher. This feature is activated via FieldScout software (v. 5.02 or higher). Purchasing the TDR Turf Rod Spacer makes the activation key available.

- 1. Log into www.specconnect.net/activate. This will bring up the "Get Product Activation Key" screen.
- 2. Select the "TDR300/100 Spacers" option from the dropdown menu.
- 3. Enter the Order Number that was created when the spacer was purchased.
- 4. Click the "Get Activation Key button. The activation key will be displayed.

Get Product Act	ivation Key
TDR300/100 Spacers	Ŧ
Order Number	
8087755576	
Your Product Activation Key is: E689 Please use this key in addition to you Get Activation Key	-D304-8EC9-47FD ur order number to unlock your copy of TDR300/100 Spacers

(note: entries in figure above are just for illustration)

- 5. Connect the TDR meter to your PC and open FieldScout software.
- 6. Open the Meter Settings screen.
- 7. Click the "Enable Spacers" button in the lower left corner. This will bring up the "Activate FSSpacer" screen.
- 8. Enter the Order Number and Activation Key.
- Click OK to complete the activation process. The Enable Spacers button should now read "Update Pending" with the text grayed out.
- 10. Click the "Save" button. A progress screen will be visible while the meter is updated.
- 11. The button text will change to "Spacers Enabled"
- 10. Power up the meter, scroll to the Rod Selection screen and confirm the two additional rod length options are now available.

Meter Settings				
Meter Info. Serial #: 1	Model #: T[	R 300 Firmware Version: 7.	7.3	
Meter Name: Tes	t (Max Lengt	h = 32 Characters)		
Logger Settings Enable Meter's	Logging Function	Activate FSSpacer	>	×
5 Enter Time Zo	ne Correction Nur	Order Number		
Units Inches	- Relative Water	Activation Code		
C mm	Type Nam (5 Chr Max	Enter the order number and your Activation Code to activate FieldScout.		
Enable Spacers	Dry Set Point (%) Wet Set Point (%)	go to www.spe You will need you	ecconnect.net/activate to obtain it. ur order number to generate the code.	
	Use Calibration			
	Save		OK Cancel	]