

SERVICE BULLETIN NO. 20080102

January 2, 2008

SUBJECT **Loose Battery Holder**

PRODUCT FAMILY **WatchDog 2000 Series Mini Stations**

AFFECTED UNITS Models 2475, 2450, 2425, and 2400 (Items 3686WD, 3684WD, 3683WD, 3685WD).

DETAILS

Some WatchDog Mini Stations have battery holders with weak retention clips, allowing the AA batteries to "pop out" of the holder. This most commonly occurs when the station is jarred, or in periods of high temperature.

RESOLUTION

Spectrum Technologies has designed an aluminum battery clip which secures the batteries in the holder, while sliding to the side for easy insertion and removal of the batteries. The clip is installed on all new stations, and is available without charge for stations exhibiting this problem.

INSTALLATION

1. Remove the front cover from the station by loosening the four screws at the corners.
2. Remove the batteries from the holder.
3. It is easiest to install the clip at the left recessed area of the battery holder (see image A).
4. Hook one end of the battery clip under the bottom edge of the battery holder (image B).
5. Slide the other end of the clip down the upper edge of the holder until it latches underneath the holder (image C).
6. Slide the clip to the left to insert the right-side batteries, then to the right for the rest. Return the clip to the center to secure the batteries.
7. Replace the front cover, and reset the date and time.

