

WARRANTY

This product is warranted to be free from defects in material or workmanship for 1 year from the date of purchase. During the warranty period Spectrum will, at its option, either repair or replace products that prove to be defective. This warranty is void if the Spectrum products have been damaged by customer error or negligence or if there has been an unauthorized modification.

Returning Products to Spectrum

Before returning a failed unit, you must obtain a Returned Goods Authorization (RGA) number from Spectrum. You must ship the product(s), properly packaged against further damage, back to Spectrum (at your expense) with the RGA number marked clearly on the outside of the package. Spectrum is not responsible for any package that is returned without a valid RGA number or for the loss of the package by any shipping company.

Spectrum[®]
Technologies, Inc.

"To Measure Is To Know"


Spectrum Technologies, Inc.
12360 S Industrial Dr E
Plainfield, IL 60585
(800) 248-8873 or (815) 436-4440
Fax (815) 436-4460
E-Mail: info@specmeters.com
www.specmeters.com

WATCHDOG[®] 100 DOCKING STATION

USER MANUAL

CATALOG #3655K

FOR USE WITH WATCHDOG
MODEL 100 BUTTON LOGGERS

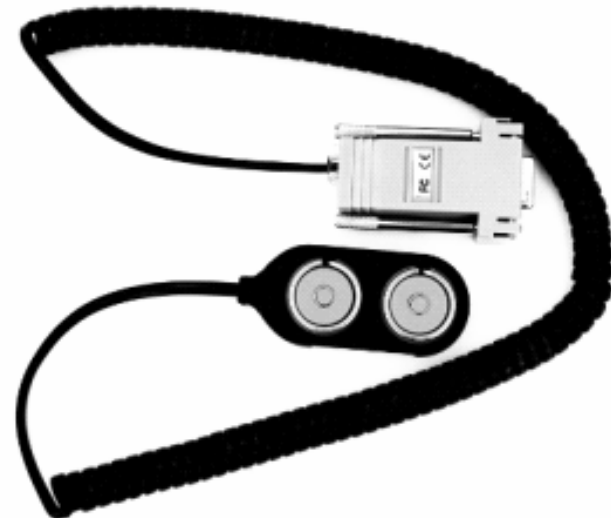

Spectrum[®]
Technologies, Inc.


"To Measure Is To Know"

Thank you for purchasing a WatchDog 100 Docking Station. The Docking Station is used to connect the WatchDog Model 100 Data Loggers to a PC. SpecWare software on the PC reads data from the loggers and launches them to collect data.

This manual will aid you in using your docking station. Read it thoroughly to insure proper and effective use.

Assembling the docking station

The docking station has two parts. To assemble, simply insert the telephone-style RJ11 plug on the end of the coiled cable into the jack on the end of the 9-pin-D-connector. The assembled product should appear as pictured below.

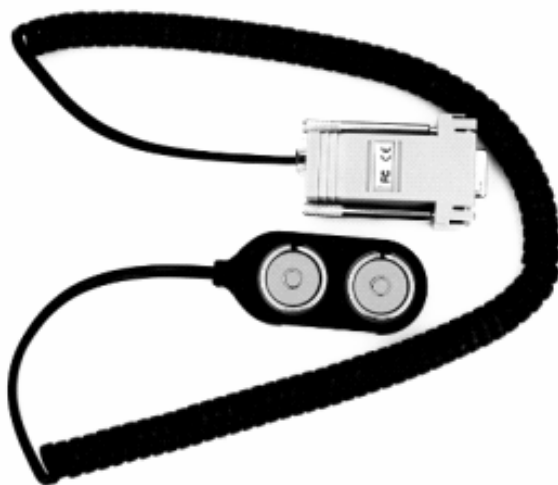

Connecting the docking station to the PC

The docking station has a serial port interface. To connect to a PC that does not have a serial port you will need to purchase a USB to serial adapter, item 3661USB.

Connecting the WatchDog Model 100 data logger to the docking station

The WatchDog Model 100 data logger simply snaps onto the docking station as shown in the photo below. While attached to the docking station, the logger may be read and/or relaunched using SpecWare software.

The docking station has two blue buttons/docks. Either may be used with your data loggers (do not however use both simultaneously).

Removing the WatchDog Model 100 data logger from the docking station

Grab the Model 100 data logger on two sides and pull up on a slight angle (as pictured below). Do not grab the corner of the backing and pull as the severe bending that results may separate the backing from the logger.

